

SWEDX

Your Digital Signage Partner

User's Guide

SDS40K8-01
SDS50K8-01
SDS58K8-01
SDS65K8-01
SDS75K8-01

MX-40K8-01
MX-50K8-01
MX-58K8-01
MX-65K8-01
MX-75K8-01

40"

Digital Signage Screen

50"

Digital Signage Screen

58"

Digital Signage Screen

65"

Digital Signage Screen

75"

Digital Signage Screen



SWEDX Wave



SWEDX Direct




SWEDX Soundbar



Digital Signage Screens

SWEDX offers a wide range of LED-TVs and digital signage products and its accessories. For more information please visit www.swedx.com

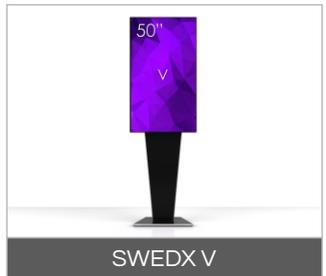

SWEDX V



SWEDX Kiosk



SWEDX Matrix Video Walls



SWEDX Lamina

<u>INDEX</u>	<u>Page</u>
<u>Introduction</u>	<u>4</u>
<u>Safety precaution</u>	<u>4</u>
<u>Basic operation</u>	<u>5</u>
<u>Contents</u>	<u>6</u>
<u>Inputs</u>	<u>6</u>
<u>Remote Control</u>	<u>7</u>
<u>Remote control buttons</u>	<u>8</u>
<u>First Time Installation</u>	<u>9</u>
<u>Main Operations</u>	<u>10</u>
<u>Volume Control</u>	<u>10</u>
<u>OSD Menu Operations</u>	<u>10</u>
<u>OSD Menu Structure:</u>	<u>10</u>
<u>Setup Menu</u>	<u>11</u>
<u>Channel Menu (Satellite)</u>	<u>12</u>
<u>Channel Menu (DTV)</u>	<u>16</u>
<u>Picture Menu</u>	<u>18</u>
<u>Sound Menu</u>	<u>19</u>
<u>Time Menu</u>	<u>20</u>
<u>Lock Menu</u>	<u>21</u>
<u>USB Media Player</u>	<u>22</u>
<u>Supported file formats and codecs</u>	<u>23</u>
<u>Text-TV / Teletext</u>	<u>24</u>
<u>Product base assembly</u>	<u>25</u>
<u>Wall mount assembly</u>	<u>26</u>
<u>Troubleshooting</u>	<u>27</u>
<u>Warranty and Service</u>	<u>28</u>
<u>How to get service</u>	<u>29</u>
<u>Limitation of liability</u>	<u>29</u>

Design and specifications are subject to change without notice.

Introduction

Thank you for choosing SWEDX Digital Signage Screens. Please read this manual thoroughly before operating the product. Make sure the display was not damaged in transit. Should the product be damaged, please contact your dealer and do not install it. Check that you have all the accessories according to the model.

Safety precaution

- Do not place the product on unstable places, from which it may fell off
- Do not expose the product to extreme temperature and humid environment
- Avoid subjecting the product to direct sunlit or other heat sources
- Do not put the product into any liquid
- Do not put anything inside the product, or place water container on top of the it
- In thunder rainy days (especially with lightning), please unplug the power and antenna cables
- Do not step on the power cable, or tangle them together
- Avoid overload of the exterior electric outlet to prevent fire hazard of electric shock
- Clean the product with dry and soft fabric
- If your product is broken, do not repair it by yourself, but contact the maintenance personnel
- If the remote control is left unused for a longtime, please take the batteries out and store them in dry places
- Avoid dropping the remote control
- If the product is installed for exhibition purpose, please do not place the overheated part on the ground or carpet to prevent accident
- The apparatus shall not be exposed to dripping or splashing and that no object filled with liquids, such as vases, shall be placed on the apparatus
- Where the MAINS plug or an appliance coupler is used as a disconnect device, the disconnect device shall remain readily operable
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like
- Excessive sound pressure from earphones and headphone can cause hearing loss

Please install the product at proper position, such as wall or ceiling. Please install it under the guidance of professional staff.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference

2. This device must accept any interference received, including interference that may cause undesired operation

Please disconnect the power cord if this equipment will not be used for a long time.

Precautions When Displaying a Still Image

A still image may cause permanent damage to the screen

- Do not display a still image on the screen for more than 2 hours as it can cause screen image retention. This image retention is also known as "screen burn". To avoid such image retention, reduce the degree of brightness and contrast of the screen when displaying a still image
- Watching the screen in 4:3 format for a long period of time may leave traces of borders displayed on the left, right and center of the screen caused by the difference of light emission on the screen. Playing a DVD or a game console may cause a similar effect to the screen. Damages caused by the above effect are not covered by the Warranty.
- Displaying still images from Video games and PC for longer than a certain period of time may produce partial after-images. To prevent this effect, reduce the 'brightness' and 'contrast' when displaying still images



WARNING

To prevent the spread of fire, keep candles or other open flames away from this product at all times

Basic operation

- Use AC 100-240V 50~60 Hz power outlet for the product power supply
- If the screen of the product is not on, please press the power button on the remote control or on the product
- If you want to shut off the product temporary, please press the power button on the remote control or on the product
- If you want to shut off the product completely, please disconnect the power cable
- In **Component** and **AV** modes the product will **shut off** if there is no signal input for **30 minutes**
- In **PC-RGB** and **HDMI** modes the product will enter **idle** state if there is no signal input after **30 seconds**
- In **Media Player 1/2** modes the product will remain **On** if there is no signal input
- The setting and tuning of picture and sound will be saved when the product is shut off, which will be working in the pre-shut off state when the product is turned on again
- If PC signal source is used, please first set the resolution of the PC display card as the following modes:
For HDMI 1/2/3 (3840x2160 @ 60Hz)
For PC (1920 x 1080 @ 60Hz)
- If there is progressive output of the signal used by the user, signal source with progressive output is recommended

Preparation

- Put the product on a stable surface
- Do not fix the product with others fixations than those provided or suggested by the manufacturer
- If you have a wall mount, check that it is steady.
- Do not place any material on the product.
- Do not block or cover the ventilation openings on the product
- The product must be plugged with a tension source of 110-240 volts and 50~60 Hz
- Power cord and cables must be properly routed and protected to prevent from stepping on them
- Keep the power cord away from any heat source. Possible fire hazard


Heating sources and humidity

- Keep the product dry and away from humidity
- Keep the product away from heat sources
- Cleaning and maintenance
- Unplug the product before cleaning it. Do not use solvents or liquids to clean the product
- Only clean the product with a soft and dry fabric
- In case of troubleshooting, do not use spare parts other than those suggested by the manufacturer. Using inadequate spare parts can lead to electric shocks, short-circuits fire

or others incidents. Please contact a technical authorized by SWEDX

Departure in holidays

- Unplug the product during lightning storms or when unused for long periods of time

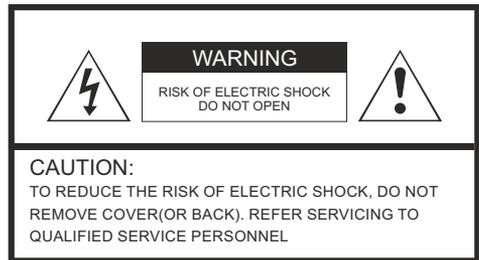


WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE

Contents

Included items:

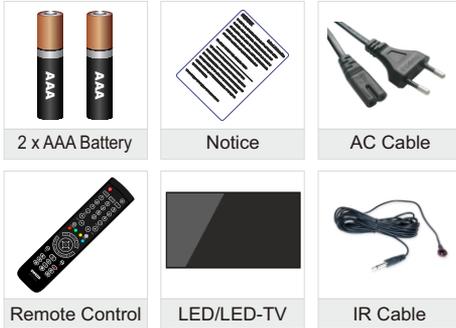

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type



AAA Battery

CAUTION

The batteries shall not be exposed to excessive heat such as sunshine, fire or the like




AAA Battery

Inputs

1. **PC**
Input for PC (VGA) sources
2. **PC AUDIO**
Input for PC audio when PC (Personal Computer) is connected
3. **COMPONENT**
Input for Component (YPBPR) sources.
Supports maximum resolution 1080p @ 60 Hz
**Component/YPBPR and AV shares the same audio input*

4. **AV**
Input for AV (Audio/Video) sources
5. **IR**
Input for external infrared receiver. *See Matrix function*
6. **RS232 OUT**
Output for RS232 signal. *See Matrix function*
6. **RS232 IN**
Input for RS232 signal. *See Matrix function*
8. **LED**
LED indicator for power status
9. **On/OFF**
Key to power the product On/Off
10. **Remote Pairing**
Key to pair the remote control with the product
11. **POWER INPUT**
Input for 100-240 V power 50~60Hz
12. **MEDIA PLAYER 1**
Input for USB Media Player 1/Firmware upgrade
13. **MEDIA PLAYER 2**
Input for USB Media Player 2
14. **HDMI1**
Input for HDMI1 (Ver. 2.0). Supports maximum resolution 3840x2160 @ 60 Hz
15. **HDMI2 (ARC)**
Input for HDMI2 (Ver. 2.0). Supports maximum resolution 3840x2160 @ 60 Hz
HDMI2 supports ARC (Audio Return Channel)
16. **HDMI3 / MHL**
Input for HDMI3 (Ver. 2.0). Supports maximum resolution 3840x2160 @ 36 Hz.
HDMI3 supports MHL (Mobile High-definition Link)
17. **COAXIAL**
Output for digital audio signal (Coaxial)

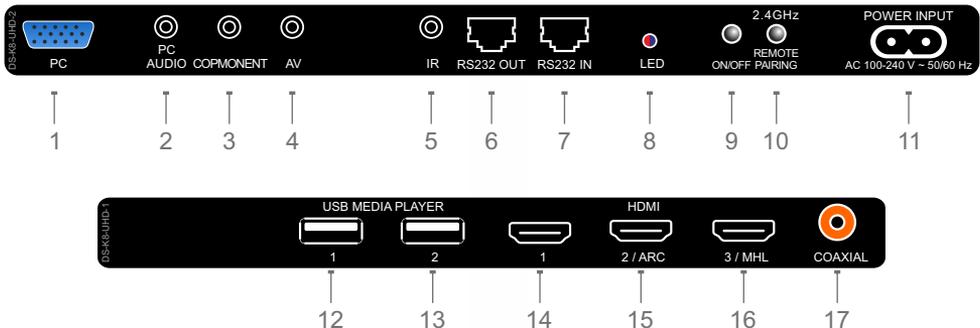

Remote Control for SDS-series (FR4)

The remote control is based on both 2.4 GHz and Infrared.

The remote control is equipped with LED indicators. The **RED** indicator states that the remote is in **Infrared** mode and the **BLUE** indicator is for **2.4 GHz** mode. Recent products from SWEDX uses 2.4 GHz receivers.

The 2.4 GHz technology allows the remote to control the TV without targeting it because the receiver is built inside the TV. Each SWEDX TV has a pre-configured remote control meaning that if you have several SWEDX TVs then the remote control for one of the TVs will function only with that particular TV and not with the other TVs.

To switch between Infrared and 2.4 GHz mode press and hold the



buttons for 5 seconds. The Red LED will flash 3 times and switch from the current mode to the other one.

To pair the remote with the TV follow the steps below

1. Connect the product (e.g screen) to power outlet
2. Make sure that the remote is in 2.4 GHz mode
3. Press and hold the



buttons on the remote control simultaneously for about 5 seconds. The BLUE LED will flash 5 times indicating that the remote is now paired with the TV.

Recent 2.4 GHz based products from SWEDX are equipped with a pairing key in order to avoid pairing more than one product when more than one SWEDX products is close by. A On/Off key is also available in recent SWEDX products.

If your product is equipped with pairing key please press and hold the pairing key for 2 second when the Blue LED light is flashing after pressing



On/Off Key

Pairing Key




The remote control "FR4" is included in the **SDS-series** (digital signage screens). For the **MX/UMX-series** the included remote control is model "FR" (see page 9)




Remote control buttons (FR4)

1. On/Off button
2. Shortcut to HDMI1,2,3
3. Number buttons for direct channel access
4. Display additional information
5. Volume increase
6. Volume decrease
7. Picture freeze
8. RED
9. GREEN
10. *Not applicable for this product*
11. Navigation button UP
12. Navigation/adjust button LEFT
13. Navigation button DOWN
14. Menu display. In OSD sub-menu press to access previous menu
15. *Not applicable for this product*
16. Shortcut to Media Player 1,2
17. Aspect Ratio toggling
18. Start/Pause play
19. Stop play
20. Fast backward
21. Previous Title
22. *Not applicable for this product*
23. Mute the built-in speakers
24. Available sources selection
25. *Not applicable for this product*
26. *Not applicable for this product*
27. *Not applicable for this product*
28. *Not applicable for this product*
29. Enter sleep mode in certain chosen time
30. Blue
31. Yellow
32. *Not applicable for this product*
33. *Not applicable for this product*
34. Confirm/activate button
35. Navigation/adjust button RIGHT
36. Exit the OSD
37. *Not applicable for this product*
38. Shortcut to AV
39. *Not applicable for this product*
40. Fast forward
41. Next Title
42. *Not applicable for this product*

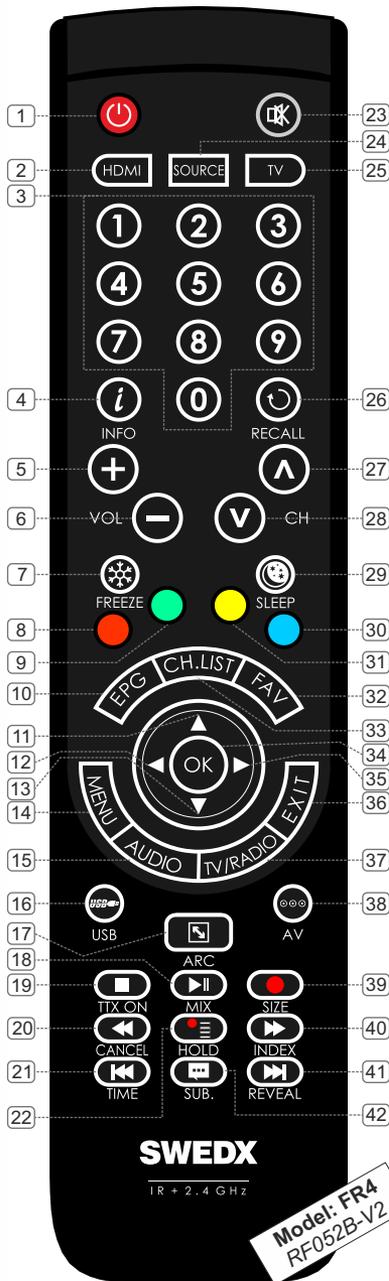

Remote control (FR) buttons

- | | |
|---|--|
| 1. On/Off button | 27. <i>Not applicable for this product</i> |
| 2. Mute the built-in speakers | 28. LED indicator |
| 3. Enter sleep mode in certain chosen time | 29. Available sources selection |
| 4. <i>Not applicable for this product</i> | 30. Display additional information |
| 5. Aspect Ratio toggling | 31. Picture freeze |
| 6. Number buttons for direct channel access | 32. Alter sound mode |
| 7. <i>Not applicable for this product</i> | 33. Alter picture mode |
| 8. Shortcut to HDMI 1,2,3 | 34. Volume increase |
| 9. Shortcut to PC input | 35. Volume decrease |
| 10. Menu display. In OSD sub-menu press to access previous menu | 36. <i>Not applicable for this product</i> |
| 11. Navigation button UP | 37. <i>Not applicable for this product</i> |
| 12. Confirm/activate button | 38. <i>Not applicable for this product</i> |
| 13. Navigation/adjust button LEFT | 39. <i>Not applicable for this product</i> |
| 14. Navigation button DOWN | 40. Exit the OSD |
| 15. Shortcut to Component | 41. Navigation/adjust button RIGHT |
| 16. Stop play | 42. <i>Not applicable for this product</i> |
| 17. Start/Pause play | 43. <i>Not applicable for this product</i> |
| 18. Fast forward | 44. <i>Not applicable for this product</i> |
| 19. Fast backward | 45. Next Title |
| 20. RED | 46. Previous Title |
| 21. GREEN | 47. Blue |
| 22. <i>Not applicable for this product</i> | 48. Yellow |
| 23. <i>Not applicable for this product</i> | 49. <i>Not applicable for this product</i> |
| 24. <i>Not applicable for this product</i> | 50. <i>Not applicable for this product</i> |
| 25. <i>Not applicable for this product</i> | 51. <i>Not applicable for this product</i> |
| 26. <i>Not applicable for this product</i> | 52. <i>Not applicable for this product</i> |

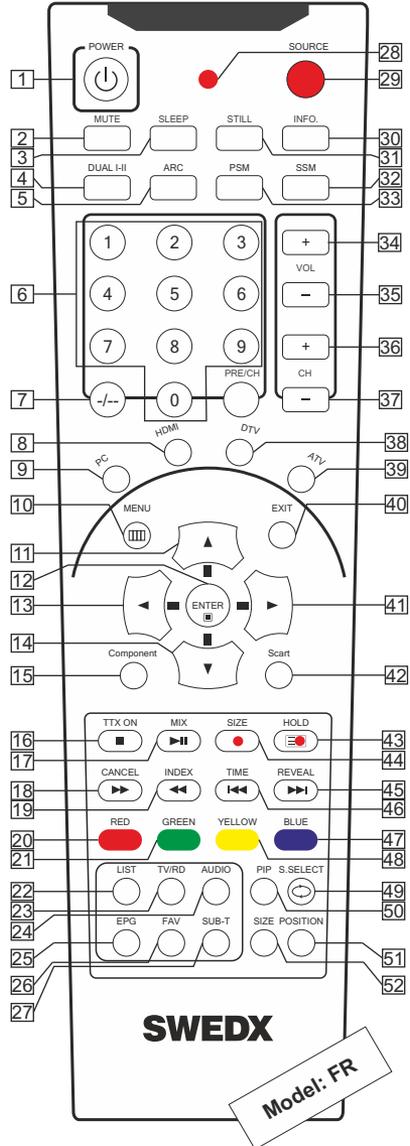

The remote control "FR" is included in the **UMX/MX-series** (Matrix video wall screens). For the **SDS-series** the included remote control is model "FR4" (see page 7)



In order to control the UMX/MX screens with the "FR" remote control an external Infrared receiver must be connected to the screens IR input (see page 6 input No. 5)

Main Operations

Turning On And Off



Press **POWER** on the remote control or the On/Off button on the control buttons. The product will turn on and will be ready to be used.


Select Source



Press **SOURCE** on the remote control. The source list menu will appear. Navigate the list with



Up/Down on the remote control to select the source and confirm by pressing **OK**.

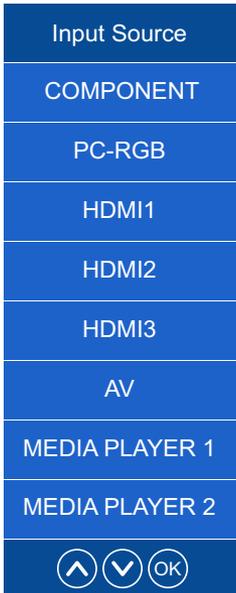

Volume Control



Press **VOL+ / VOL-** on the remote control to adjust the volume level.



Press the **MUTE** on the remote control to mute the sound.



OSD Menu Operation



- Press **MENU** on the remote control to access the OSD Menu. Pressing the same button again will move you backward in the OSD structure.
- Press **OK** button to confirm/select.
- Use **LEFT & RIGHT** buttons to navigate or change the parameters of the current

sub-menu.

- Use **UP & DOWN** buttons to navigate in the OSD Menu.
- Press **EXIT** button to exit the OSD Menu.


OSD Menu Structure

- OSD (On Screen Display) allows users to control or adjust various features and settings in accordance with desired preferences.
- Press the **MENU** button on the remote control to see the main OSD menu.



OSD Menu Operation:

- Main Menu:** Press **MENU** on the remote control to enter the main OSD menu. First, choose Main menu item you need with the buttons **◀ & ▶**. To select a Main menu items, just press **OK**.
- Sub Menu:** Each menu item has its own sub menu items to set.
- Sub Menu items:**
 - A: If there is no value to adjust it means there is a sub menu which you can access by pressing **OK** and modify the menu values.
 - B: If there is no **▶** part, the item has adjustable values. Use **◀ & ▶** to adjust the values.
 - C: If the sub-menu item is grey colored, it means this item is not available in the particular mode.

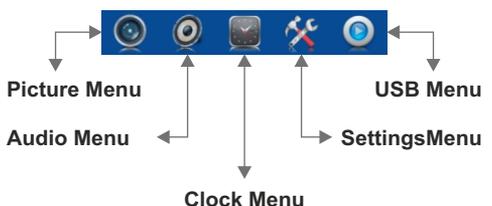

Picture



Use the Picture menu to adjust the picture settings to meet your requirements:

Picture mode

Standard: Suitable for a normal room

Mild: Suitable for a dark room

User: In User mode you can adjust the Contrast, Brightness, Color, Sharpness to meet your requirements

Dynamic: Suitable for a bright room

Aspect Ratio

Set the various picture options such as picture size and aspect ratio.

Depending on the input source, the picture size options may vary.

The connected device to the controller may have its own set of screen sizes as well. However, it is highly recommended to use PointToPoint / Just Scan mode.

Auto

Automatically adjusts the picture size to the signal

Zoom1&2

Magnifies the picture size.

4:3

Sets the picture to basic (4:3) mode.

Do not watch in 4:3 format for a long time. Traces of borders displayed on the left, right and center of the screen may cause image retention (screen burn) which are not covered by the warranty.

PointToPoint

Displays the signal without any cut-off when HDMI (720p / 1080i / 1080p / 2160p) signals. The PointToPoint mode will display without scaling

which means if the signal resolution is lower than 3840x2160 then the picture will be shown according to its original size.

Just Scan

Just Scan mode will display crispier picture with scaling to fill the entire screen.

Noise Reduction

Choose to activate noise reduction. Available options are Off, Low, Middle and High.

If the signal received by the input controller is weak, you can activate the Noise Reduction feature to help reduce any static and ghosting that may appear on the screen.

Color Temperature

Choose between predefined settings User, Warm, Medium and Cold). In User mode you can adjust the Red, Green and Blue color temperature.

Screen (only in PC mode)

When the TV is in PC-Mode additional settings are available for PC-Setup.

H-Offset: Adjust the PC's screen positioning horizontally

V-Offset: Adjust the PC's screen positioning vertically

Size: Adjust the screen size

Phase: Adjust the signal phase

Local Dimming

Local dimming is a feature that dims the backlight behind parts of the screen that are displaying black. This makes blacks appear deeper and darker on those parts of the screen, which can be a big bonus when watching video with darker scenes.

Backlight

Adjust the backlight intensity.



Select Disk: Choose the disk you want to use

Check PVR File System: Choose to check the disk status and compatibility

USB Disk: It provides information if the disk is status

Format: Choose to format the disk. Two formatting standards are available, FAT32 and Hi Speed FS. You can also choose the PVR File System Size you want to format. After formatting the LED will report the estimated recording time for the formatted disk both for Standard Definition and High Definition recording and let you choose the Time Shift Size (see *Time Shift Function* for more information)

Blue Screen

Options: Off/On

When is activated (ON) a blue screen will be displayed when no signal is received.

First Time Installation

The function will activate the First Time Installation menu. See the description of this function in the previous pages.

Reset

This function will reset the TV to the default settings.

Software Update (USB)

This function will update the TVs firmware by using the USB input. Contact SWEDX to check if an update for the TV firmware is available.

HDMI CEC



Activate CEC over HDMI and set the HDMI ARC (audio retrun channel) feature. The Auto Power option allows the TV to turn on when a CEC compatible device is connected and powered on.

Sound



Use the Sound menu to adjust the sound settings to meet desired requirements:

Sound Mode

Choose between predefined settings:

Standard: Suitable for normal programs

Music: Suitable for music program

Movie: Suitable for movies

Sports: Suitable for sport programs

User: In User mode you can adjust the Treble and Bass to meet desired requirements.

Balance

Adjust the sound output balance between left and right speaker.

Surround Sound

In TrueSurround or SRS TrueSurround mode the screen delivers a compelling, virtual surround sound experience through the internal television speakers. It is fully compatible with all multichannel formats.

SPDIF Mode

Choose the output mode for the SPDIF signal. Choose between Auto or PCM.

Time



Clock



Use the Time menu to set the date and time for the product. The date and time are important for usage of the timer function.

Set the date and time under the Clock option by choosing the block option and pressing the ► button. Change the values to the correct time by pressing the ◀ & ► buttons. Press Menu to exit and save the new date and time settings.

Timer Mode

The product is equipped with advanced timer settings. When activated, the timer settings provide 3 modes for the timer function. Only one mode can be activated at a time. Each mode has 5 timer sets (Time 1, 2, 3, 4 and 5). It is possible to activate one or more time sets

Once: The product will turn on/off once according to the defined On Time and Off Time.

Everyday: The product will turn on/off everyday according to the On Time and Off Time. This function is suitable if the product is used everyday.

Customize: In customize mode you can define the on/off time for Monday~Friday and/or Saturday and/or Sunday.



Timer example:

Timer Mode: Customize

Mode: Mon~Fri

Time 1: ON

On Time: 08:00

Off Time: 13:00

Mode: Saturday

Time 1: ON

On Time: 10:00

Off Time: 13:00

Mode: Sunday

Time 1: ON

On Time: 11:00

Off Time: 13:00

Mode: Mon~Fri

Time 2: ON

On Time: 14:00

Off Time: 21:00

Mode: Saturday

Time 2: ON

On Time: 14:00

Off Time: 20:00

Mode: Sunday

Time 2: ON

On Time: 14:00

Off Time: 19:00

Monday	Tuesday	Wednesday	Thursday	Friday	Saturday	Sunday
00	00	00	00	00	00	00
01	01	01	01	01	01	01
02	02	02	02	02	02	02
03	03	03	03	03	03	03
04	04	04	04	04	04	04
05	05	05	05	05	05	05
06	06	06	06	06	06	06
07	07	07	07	07	07	07
08	08	08	08	08	08	08
09	09	09	09	09	09	09
10	10	10	10	10	10	10
11	11	11	11	11	11	11
12	12	12	12	12	12	12
13	13	13	13	13	13	13
14	14	14	14	14	14	14
15	15	15	15	15	15	15
16	16	16	16	16	16	16
17	17	17	17	17	17	17
18	18	18	18	18	18	18
19	19	19	19	19	19	19
20	20	20	20	20	20	20
21	21	21	21	21	21	21
22	22	22	22	22	22	22
23	23	23	23	23	23	23

On Time On Time Off Time

Auto sleep

This function will put the product into Off mode in given time. Choose between Never, 4, 6 or 8 hours.

Settings



OSD Language:

Choose the OSD language. Available languages are English, Deutsch, Spanish, French, Italian, German, Japanese, Swedish, Arabic, Simplified Chinese.

Restore Factory Default

This function will restore the product to the factory defaults and will erase any customized settings.

HDMI CEC

Activate the HDMI CEC function.

HDMI ARC

Activate HDMI ARC (Audio Return Channel) function.

Auto Standby

When activated the product will be put into standby mode when a HDMI CEC compatible device is connected and turned off.

Auto On

When activated the product will be put into On mode when a HDMI CEC compatible device is connected and turned on.

Device Control

When activated the HDMI CEC compatible device can be controlled using the product's remote control.

Device List

Displays connected HDMI CEC compatible devices.

Color Range

Choose the scope of the color range. Available options

EDID Mode

This is an informative feature to display the HDMI mode of the connect products. Available options are HDMI 1.4 or HDMI 2.0. Products with support for HDMI 2.0 are recommended to take full advantage of the 4K feature in Swedx product.

No Signal Screen

Change the background color of the display when no signal is detected. Available options are black or blue.

Activate Fans at °C

Activate the product's ventilation/cooling fans (if available) at the defined degree.

Fan Setting

Choose the setting for the product's ventilation/cooling fans (if available). Available options are Off, low, medium, high. Choose low or medium when the product is used in quite environment and choose high when the maximum cooling is desired due to the environment.

Overheating Protection

When activated this function will turn off the product in order to protect it from damages if it reaches too high temperature. Available options are Off, 80 or 85°C.


OSD Mode

Choose the orientation for the OSD menu. Choose landscape for horizontal mode and portrait for vertical mode.

Matrix ID

Set the screen's ID when the product is used in Matrix video wall configuration. See next page for details.

USB Media Player

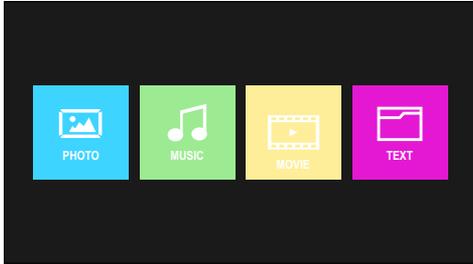

This product is equipped with a USB Media Player. It is capable of playing music, movies (up to 1080p and with subtitle support), and display photos or text documents.

To Enter USB mode

Press Source

Choose USB

Press OK


In USB mode you can choose between:

Photos: Enables you to display several formats of photos and images

Music: Enables you to play several formats of music and audio files

Movie: Enables you to play several formats of movies and video files

Text: Enables you to display TXT files

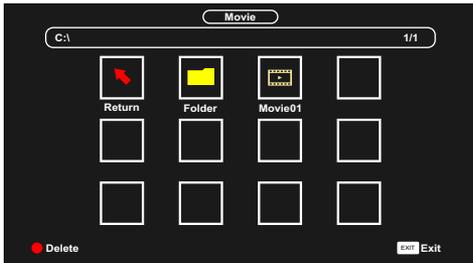

Remote Control Keys used in USB Mode

The INFO button will display available controllers where it is possible to i.e. rotate an image. The controllers may vary depending on the USB mode.

Navigation Key to navigate in the different position of the menu and press enter to activate the function.

The AUDIO button will alter audio track (if several audio tracks are available in the played file).

The SUB-T button will alter the subtitles or turn it off (if several subtitles languages are available in

the played file).

The subtitle file should be saved in UNICODE In order to display the correct characters.

Functions

-  Repeat the file
-  Go to defined time position in the file
-  Repeat the file. Choose between ALWAYS, ONCE or NO REPEAT
-  Play audio files while displaying images
-  Display the Playlist
-  Display current file's information
-  Press to rotate 90 degrees CW
-  Press to rotate 90 degrees CW
-  Press to Zoom IN
-  Press to Zoom OUT
-  Press to MOVE in ZOOM mode
-  Define a part of a video to be repeated
-  Change aspect ratio
-  Play step forward in a video
-  Play slowly forward in a video


Supported file formats and codecs

The built-in media player (USB mode) supports the following file formats:

The K16 series USB Media Player supports the following formats/codecs:						
	Format	Video Codec	Audio Codec	Resolution	Frame Rate	Mbit/s
Video	AVI	MJPEG	Mp3, WMA, AAC, MP2, PCM	1280x720	23,976~30≤ 16Mbps	≤ 20Mbps
		Xvid/MPEG4/H.264/WVM9/VC-1		1920x1080		
	MP4	MPEG-2/MPEG-4/H.264/Xvid/MJPEG				
	MPEG4					
	TS	MPEG-1/MPEG-2/H.264.VC-1				
	TRP					
	MPG	MPEG-1/MPEG-2				
	MPEG					
	NOV	MPEG4/H.264/MJPEG				
	MKV	MPEG-2/4/H.264/Xvid/RV30/40/VC-1				
	VOB	MPEG2	AAC/COOK			
	DAT	MPEG1	Mp1			
	RM	RV30/40	MP1/2/3/PCM	RV30-800x600		
RMVB			RV40-1280x720			
Images	Format	Max resolution				
	BMP	1920x1080				
	JPG					
	PNG					
Music	MP3	Mp3. 32K~48KHz. Bit Rate> 32K~320Kbps. Channel> Mono/Stereo				
	WAV	PCM. 32K~48KHz. Bit Rate> 32K~320Kbps. Channel> Mono/Stereo				
	M4A	AAC. 8K~48KHz. Bit Rate> 24K~384Kbps. Channel> Mono/Stereo				
	AAC					
	Mp4					
Information: The USB Media Player input supports:						
HD , NTSF, FAT32. Max size: 1TB						
Max 30 sub-folders						
Max 5000 files in one folder						

All trademarks and registered trademarks are the property of their respective owners.

Text-TV / Teletext

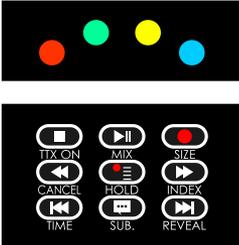

Most television stations provide written information services via Teletext. The index page of the teletext service gives you information on how to use the service. In addition, you can select various options to suit your requirements by using the remote control buttons.

TTX ON

Press TTX ON to enter Text-TV
Press TTX ON to exit Text-TV

INDEX

Used to display the index (contents) page at any time while you are viewing teletext.

SIZE

Press to display the double-size letters in the upper half of the screen. For lower half of the screen, press it again. To display normal screen, press it once again.

REVEAL

Used to display the hidden text (answers to quiz games, for example). To display normal screen, press it again.

MIX

Press to activate teletext mode after selecting the channel providing the teletext service. Press it twice to overlap the teletext with the current broadcasting screen.

HOLD

Used to hold the display on a given page if the selected page is linked with several secondary pages which follow on automatically. To resume, press it again.

CANCEL



Used to display the broadcast when searching for a page.

Red/Green/Yellow/Blue

If the FASTTEXT system is used by a broadcasting company, the different topics covered on a teletext page are color coded and

can be selected by pressing the colored buttons. Press one of them corresponding to the required. The page is displayed with other colored information that can be selected in the same way. To display the previous or next page, press the corresponding colored button.

Product base assembly

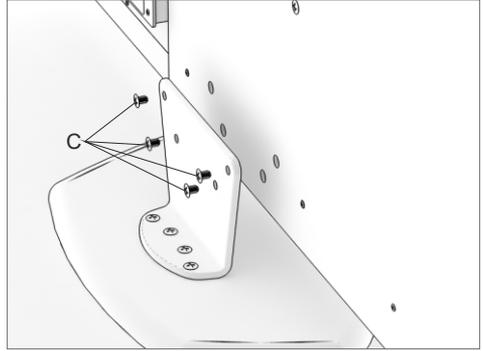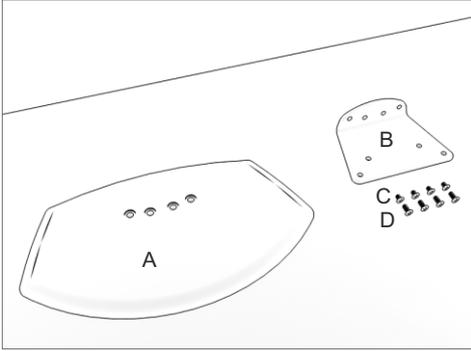



The product base contains the following parts

A. Wooden base


B. Metal part

C. M6 screw, 4 pcs, 10mm (Part No. 064-0178-00)

D. M6 screw, 4 pcs, 16mm (Part No. 064-0147-00)

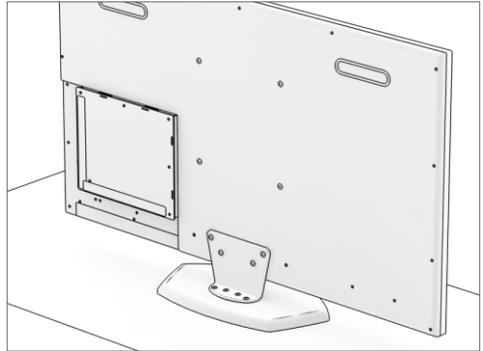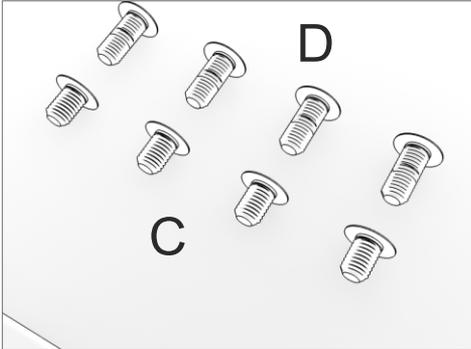

Assemble the base with the LED-TV according to the following illustrations:

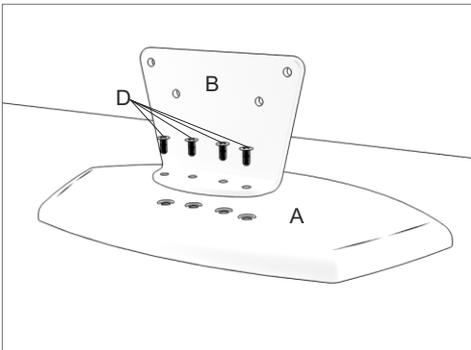


Wall mount assembly


SWEDX offers several wall mount devices which can be purchased from your dealer or www.swedx.com

See the Wall mounting parameters in the illustrations


40/42 inch

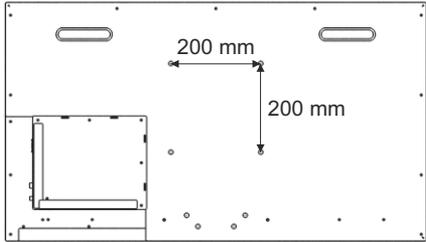


50 inch

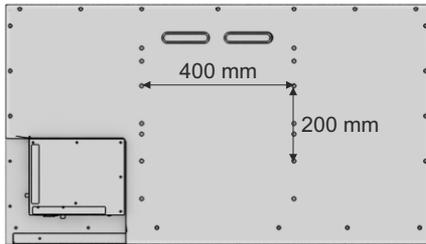


58 inch

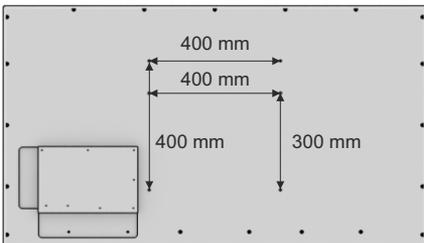

65 inch

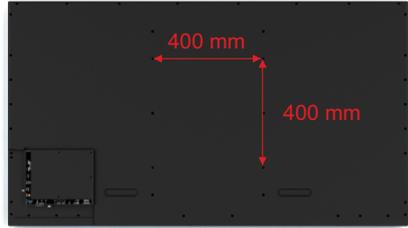

75 inch

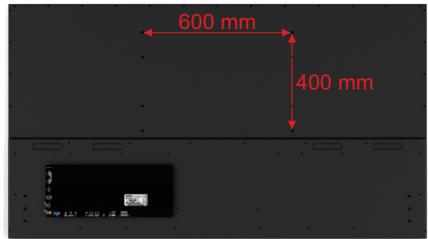

Troubleshooting

Before contacting SWEDX service or your dealer, perform the following simple checks. If you cannot solve the problem using the instructions below, note the model and serial number of your product and contact your local dealer

No sound or picture

- Check that the mains lead has been connected to a wall socket
- Check that you have pressed the POWER button on the front of the TV
- Check the picture contrast and brightness settings
- Check the volume

Normal picture but no sound

- Check the volume
- Check whether the MUTE button has been pressed on the remote control

No picture or black and white picture

- Adjust the color settings
- Check that the broadcast system selected is correct

Sound and picture interference

- Try to identify the electrical appliance that is affecting the set and move it further away.
- Plug your set into a different mains socket

Blurred or snowy picture, distorted sound

- Check the direction, location and connections of your aerial
- This interference is often due to the use of an indoor aerial

Remote control malfunctions

- Ensure that the remote is in correct mode
- Replace the remote control batteries
- Clean the upper edge of the remote control (transmission window)
- Check the battery terminals
- Turn off the TV and unplug the AC cable from the wall socket and then plug the AC cable and turn on the TV

“No signal” message is displayed

- Check that the signal cable is firmly connected to the source input
- Check that the source is turned on

On PC mode, “Not Supported Mode” message is displayed

- Check the maximum resolution and the frequency of the video adapter. For HD models the recommended resolution is 1366x768 and for Full HD models the

recommended resolution is 1920x1080 (for PC mode). In HDMI mode the recommended resolution is 3840x2160@60Hz

The image is too light or too dark

- Adjust the Brightness and Contrast

Pixel Mapping

- It is recommended to choose aspect ratio PointToPoint or JUST SCAN to achieve pixel mapping in HDMI modes

Warranty and Service

The following terms apply only to new "in the original carton" SWEDX products marketed and distributed by SWEDX, which are purchased and used by the original consumer purchaser.

Depending on the model, your terms and conditions may be different from those shown below, and this information is subject to change without prior notice. Unless specifically stated otherwise, used and reconditioned products that are resold have no warranty from SWEDX and are considered sold "AS-IS", however, the selling dealer may offer additional service options.

Warranty for SWEDX products:

Check with your dealer for the warranty period.

What the warranty covers:

SWEDX warrants your SWEDX display(s) against defects in material and workmanship during the warranty period from SWEDX factory delivery date shown in the shipping documents. If a product proves to be defective in material or workmanship during the warranty period, SWEDX will, at its sole option repair or replace the product with a similar product, provided the purchaser adheres to certain return authorization procedures and guidelines. SWEDX reserves the right to charge customer in case of warranty conditions not are fulfilled.

Who the warranty protects:

This warranty is valid only for the first purchaser.

What the warranty does not cover:

1. Any product which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
 - A. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
 - B. Repair or attempted repair by anyone not authorized by SWEDX.
 - C. Any damage of the product due to shipment.
 - D. Removal or installation of the product.
 - E. Causes external to the product, such as electric power fluctuations or failure.
 - F. Use of supplies or parts not meeting SWEDX specifications.
 - G. Normal wear and tear.
 - H. Any other cause which does not relate to a product defect.
3. Cosmetic damage by purchaser, such as markings, discoloration, scratches, dents, anti-theft devices markings, gouges or any

other defacement.

4. Physically damaged products by purchaser, such as broken PCB, Housing, damaged LED Module.
5. No Defect Found (product returned to SWEDX as defective but failure is not duplicated by SWEDX's test method.)
6. The product is not in accordance with the fault in the application
7. Timber is a lifelike natural material which can cause some little changes in the precision of the produced product such as small openings line beside the connecting point and some other small changes which are out of SWEDX control and don't make any effect for the product functionality.

Dead on Arrival (DOA)

If the product fails within the manufacturer's DOA period, a replacement product will be offered.

Before contacting us:

In many cases, your TV may not need repair. Before you contact us, please consult the troubleshooting section in your user's manual or SWEDX's FAQ web pages at <http://www.swedx.com> to see if you can easily remedy the problem yourself.

How to get service:

For information on obtaining warranty service, contact SWEDX dealer (the place where you bought your product) in first choice. If for any reason you can not contact your dealer, please contact SWEDX Customer Service by visiting <http://www.swedx.com>.

SWEDX technical support services:

During the period of product warranty, we support your basic configuration, setup and troubleshooting questions, and when required, we provide you with all instructions on how to return your product for repair. For support inquiries, please visit <http://www.swedx.com>.

SWEDX reserves the right to make final decisions regarding problem determination and the appropriate service option. Exchange units assume the remaining warranty of the original product. Please refer to your SWEDX Limited Warranty Statement for complete terms and conditions, as some models have other terms and conditions. Some limitations and restrictions apply and these programs are subject to change without prior notice.

Limitation of liability

If your SWEDX product fails to work as warranted above, your sole and exclusive remedy shall be repaired or replaced. SWEDX's maximum liability under this limited warranty is expressly limited to the lesser of the price you have paid for the product or the cost of repairing or replacement of any hardware components that malfunction in conditions of normal use. SWEDX is not liable for any damages caused by the product or the failure of the product to perform, including any lost profits or savings or special, incidental, or consequential damages. SWEDX is not liable for any claim made by a third party or made by you for a third party.

This limitation of liability applies whether damages are sought, or a claim made, under this limited warranty or as a tort claim (including negligence and strict product liability), a contract claim, or any other claim. This limitation of liability cannot be waived or amended by any person. This limitation of liability will be effective even if you have advised SWEDX.

SWEDX

